




1 What You Need

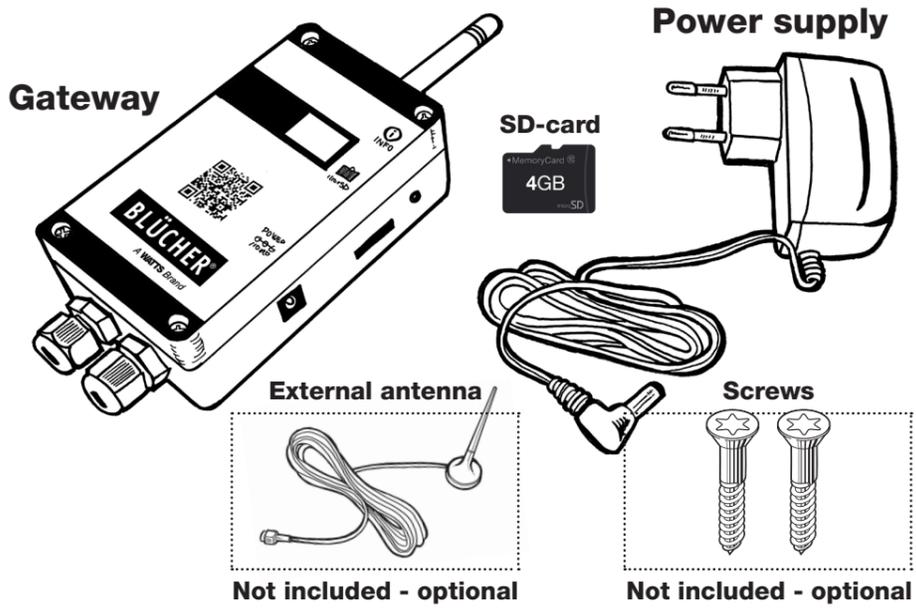


2 Location

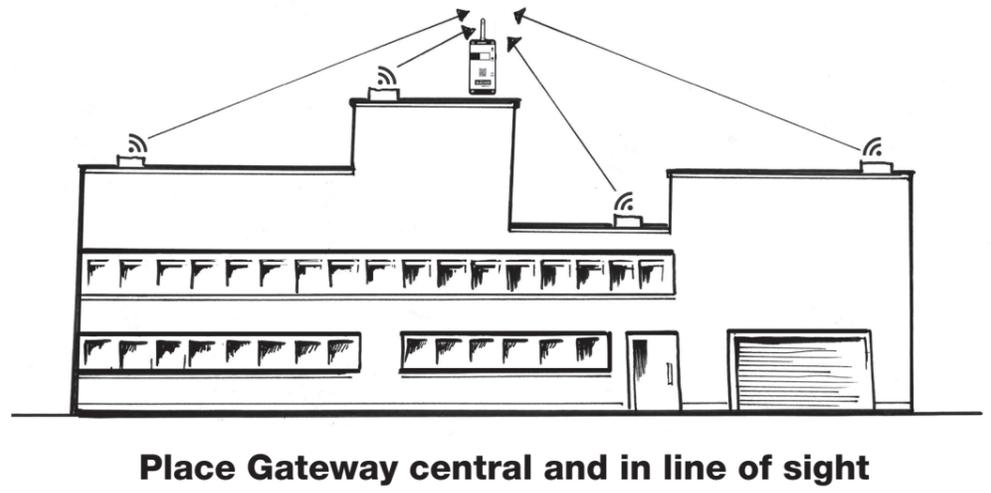


3 Installation Conditions

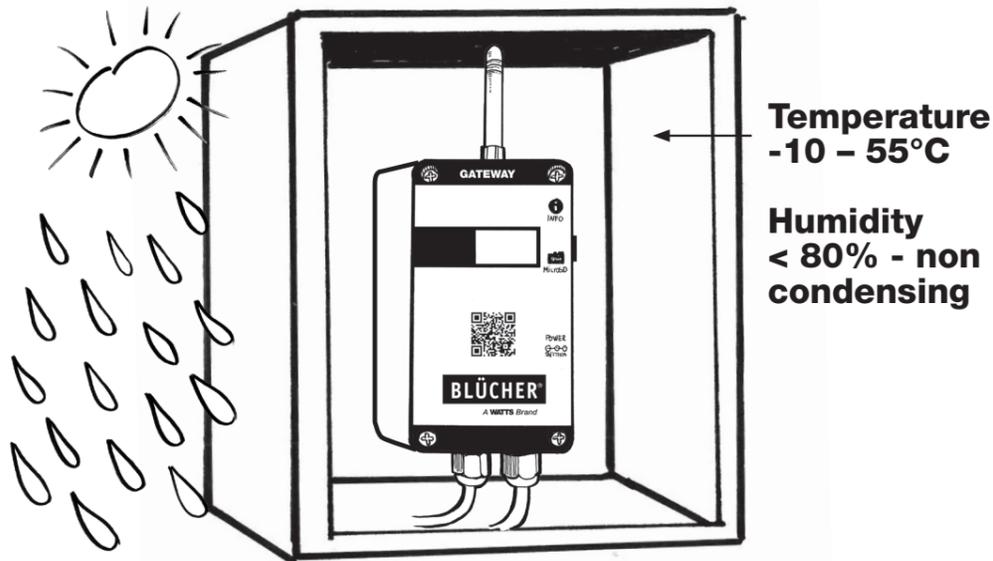


4 Access Requirements

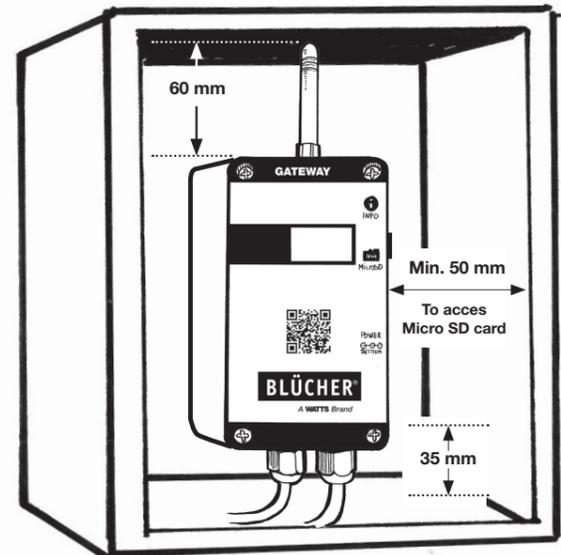


5 Mounting

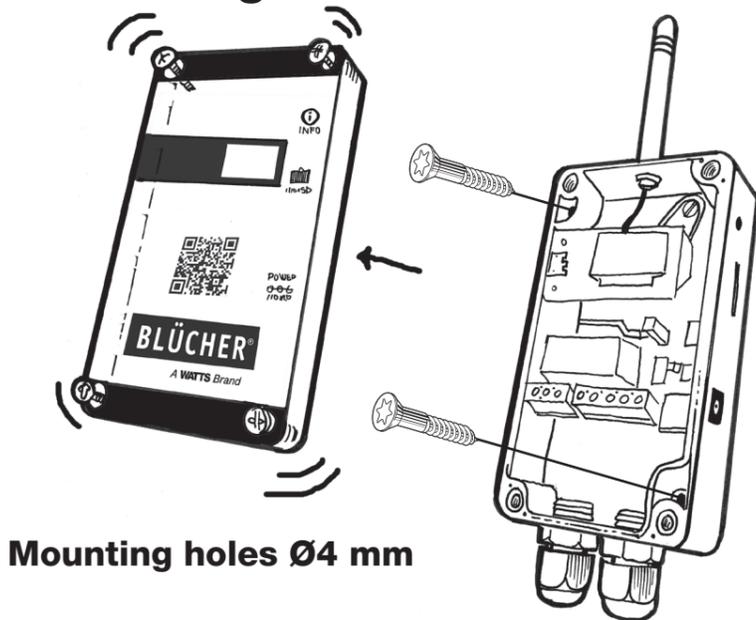


6 Configure Gateway

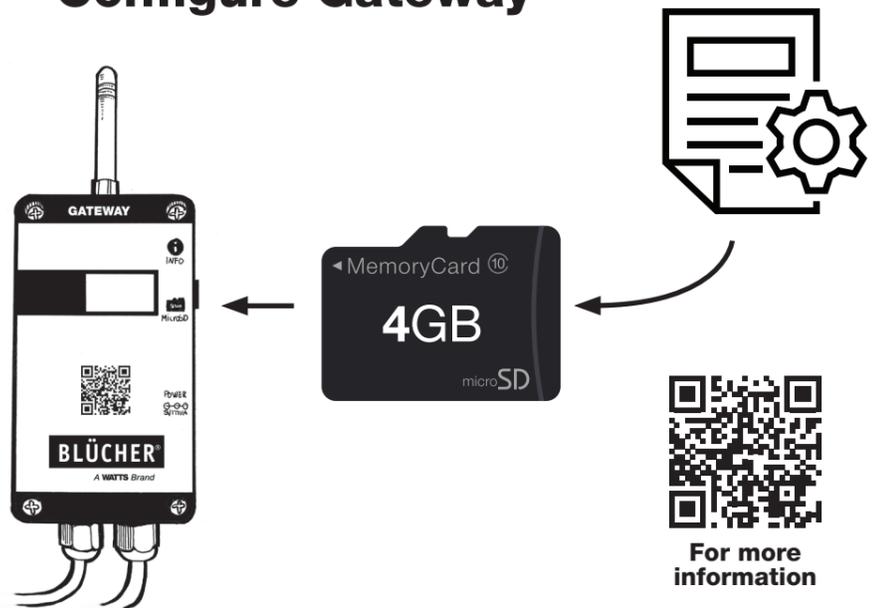

7a Connect Power

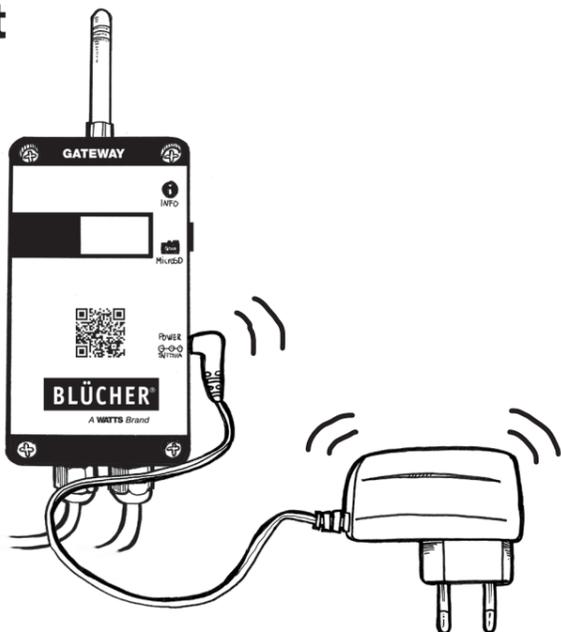

7b Internal Power Connection (optional)

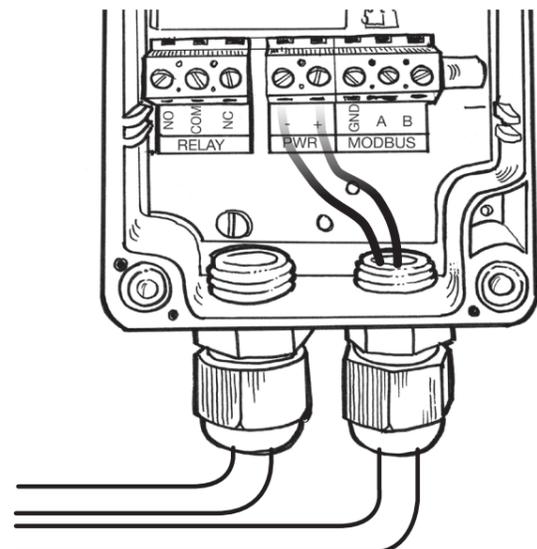

BLÜCHER Connected Roof GATEWAY



BLÜCHER®
A WATTS Brand




More info




www.blucher.com/connected-roof

BLÜCHER®
A WATTS Brand


8a) Wait and Verify

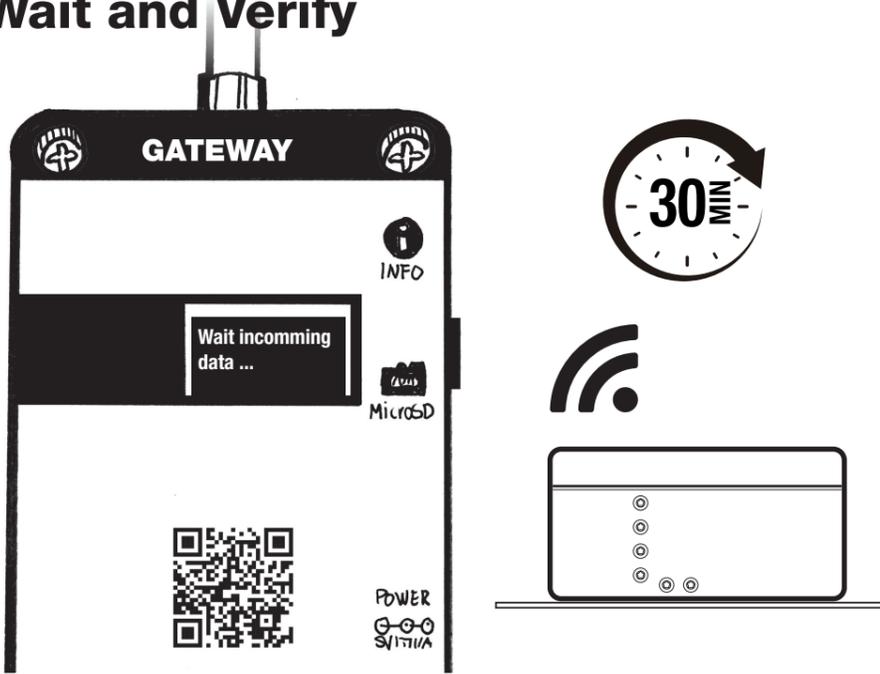

8b) Speed Up and Verify

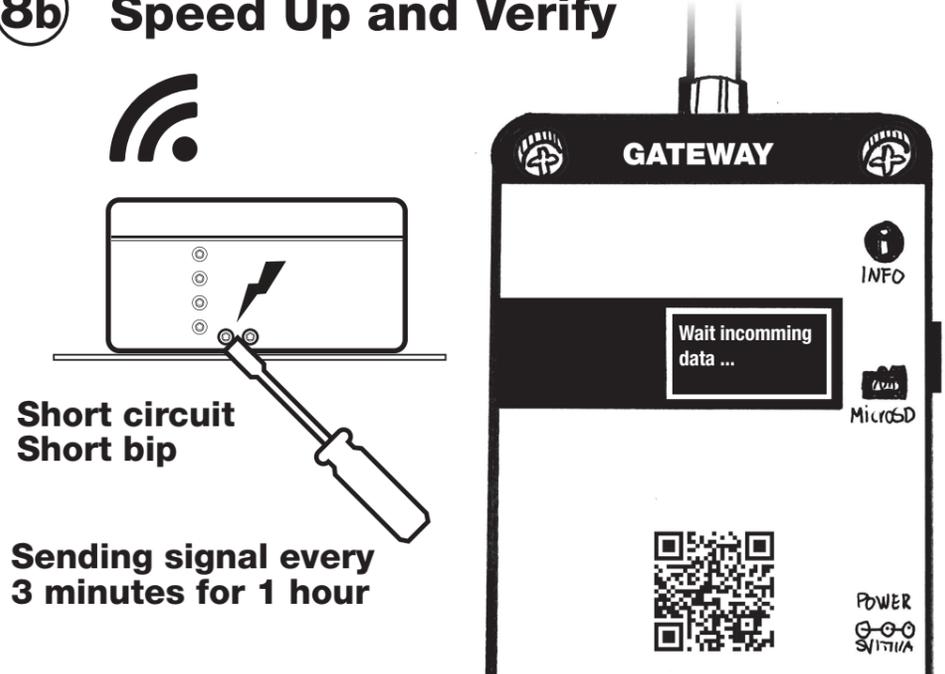


9) Verify Monitor Connection

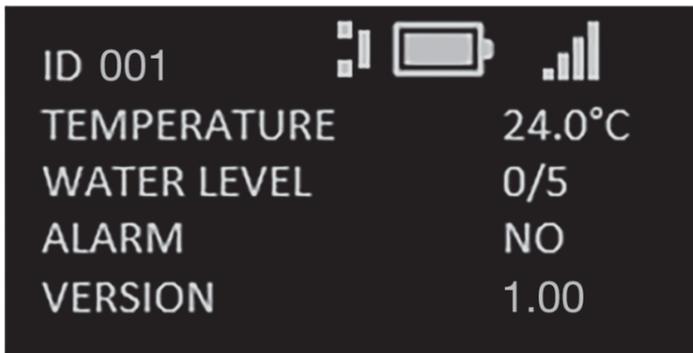


10) Relay and Modbus

See Installation guide

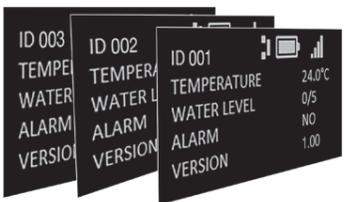

Confirm all monitors

11) Modbus (optional)

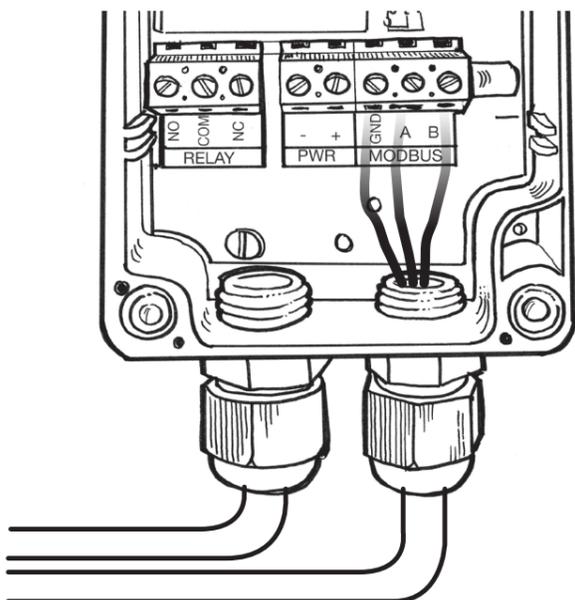

12) Relay (optional)

